 
 


Breast Pump Quick Guide

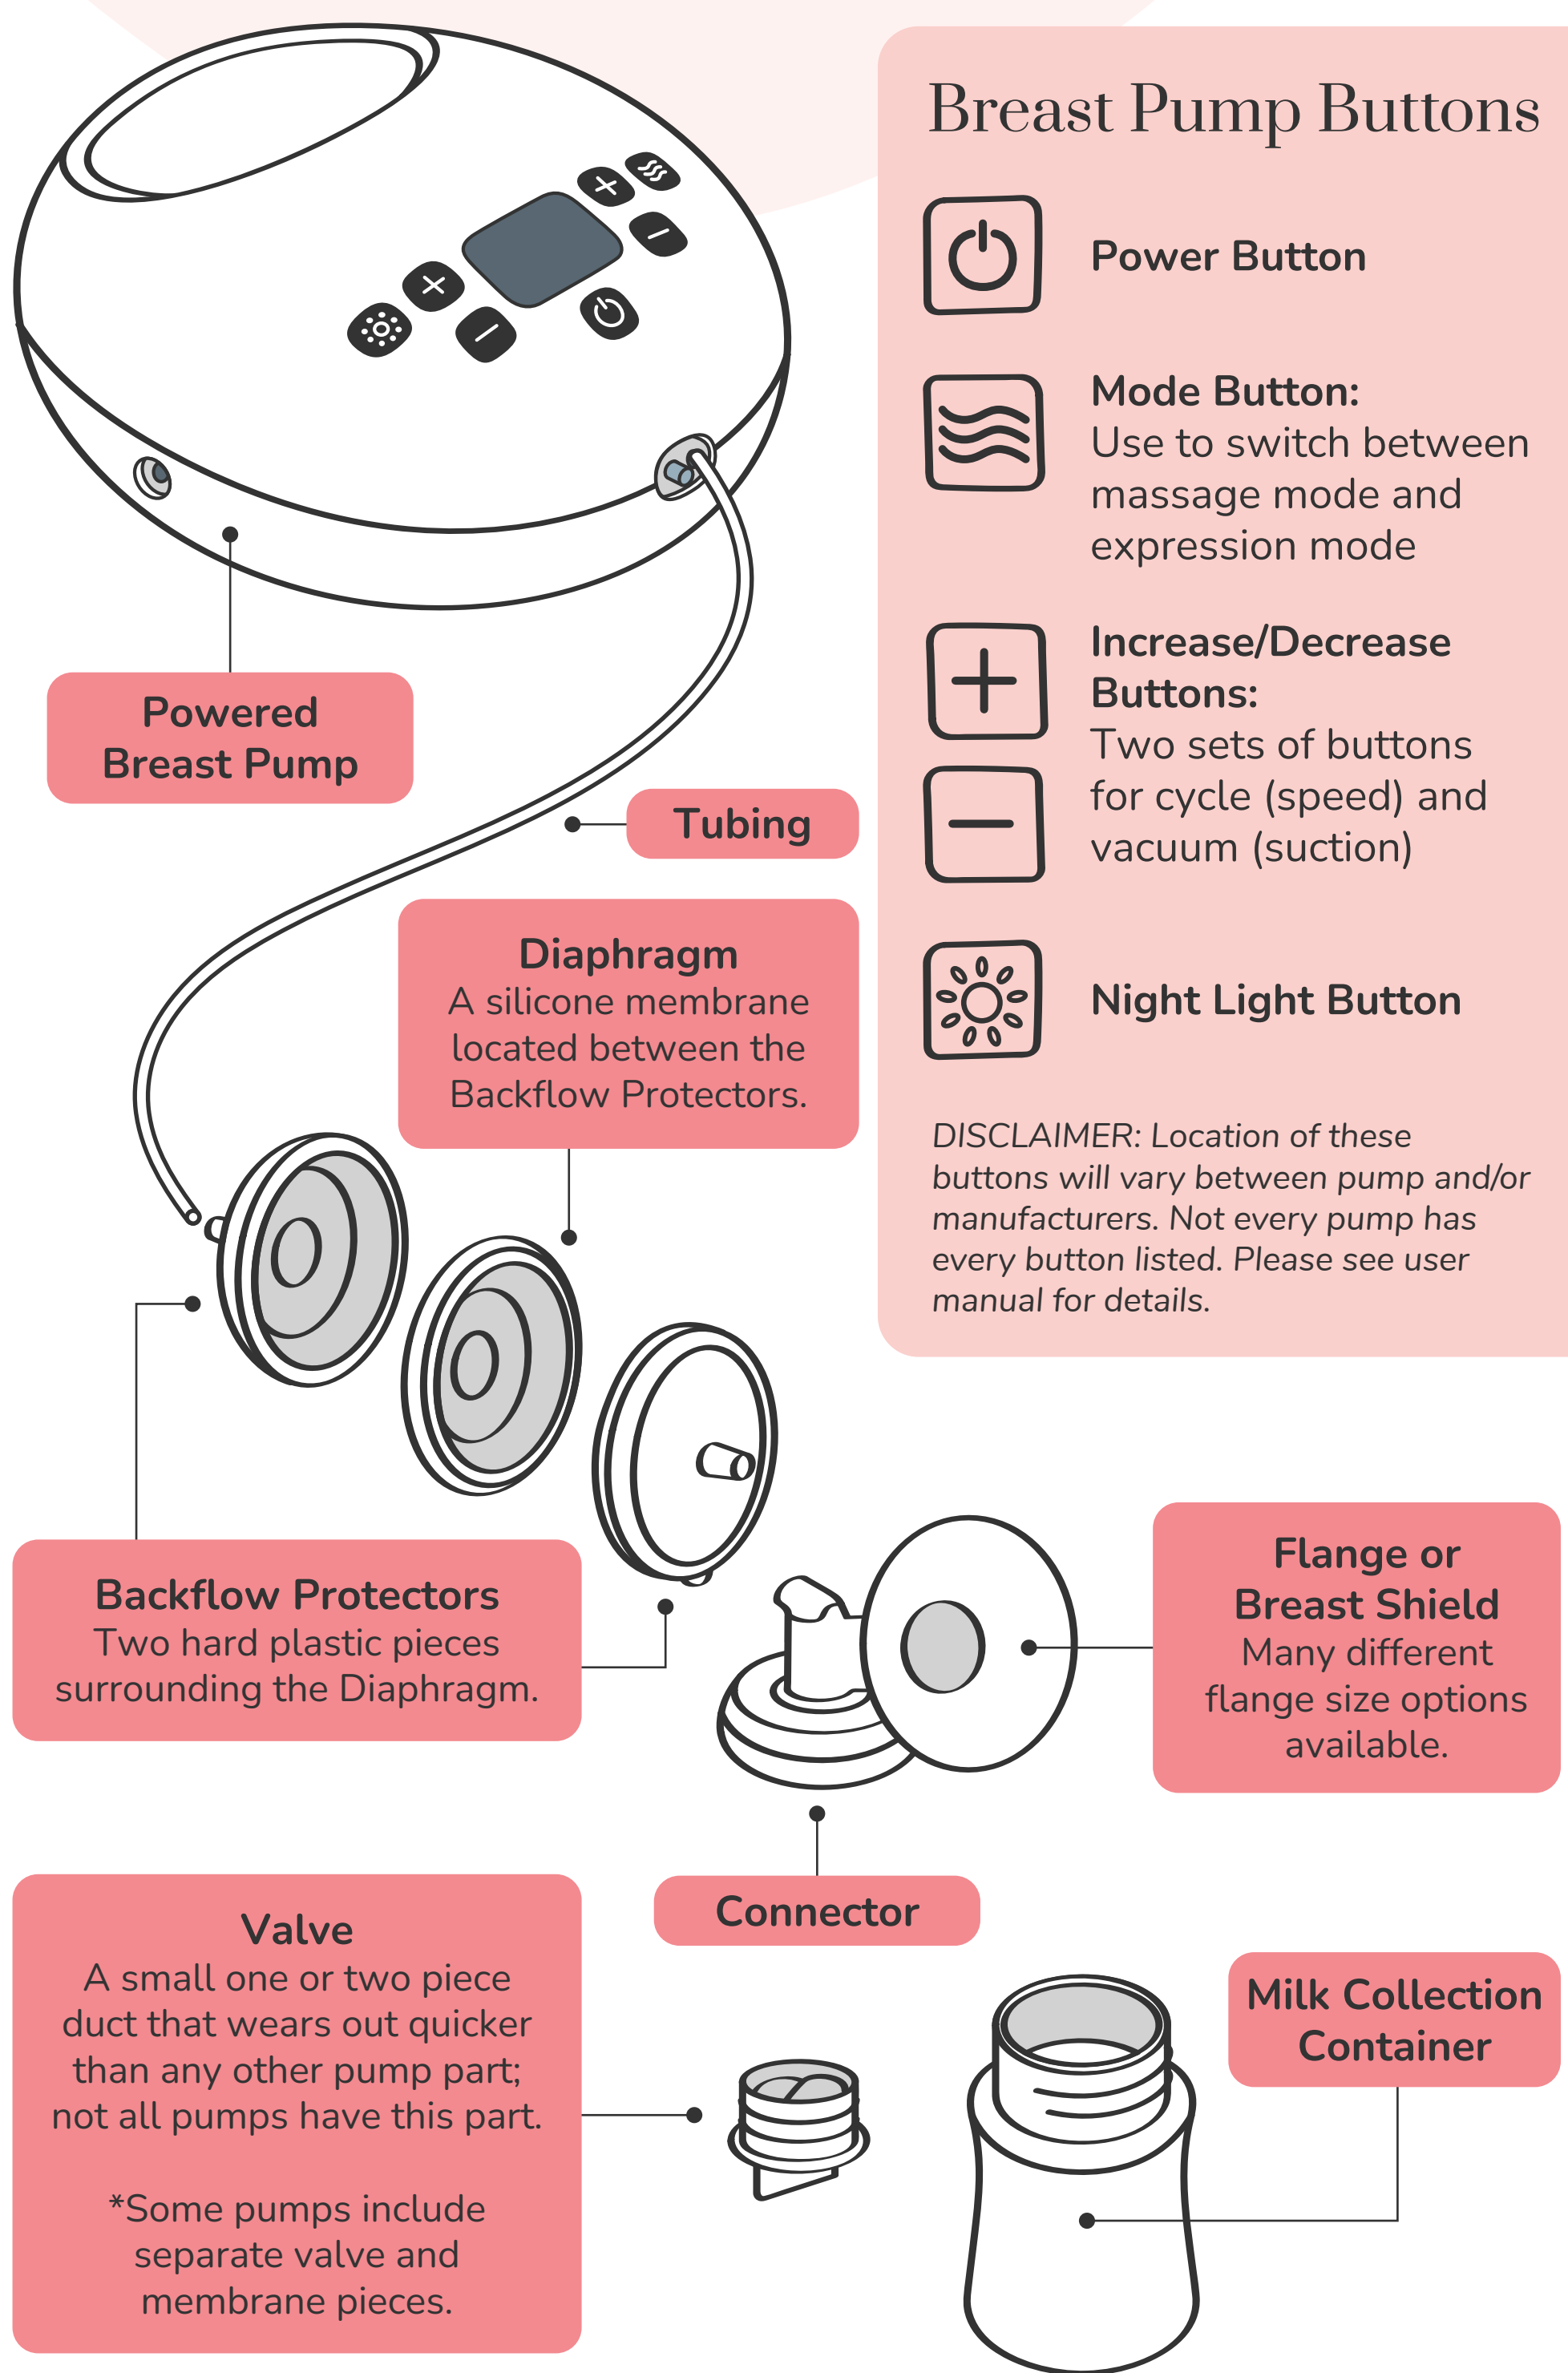

 
Pump Parts Replacement Guide

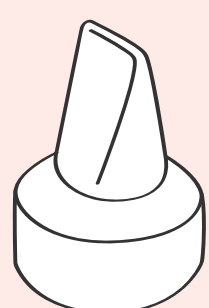

DUCKBILL VALVE

3+ Pumps per Day:
Replace every month


1-2 Pumps per Day:
Replace every 2-3 mo.

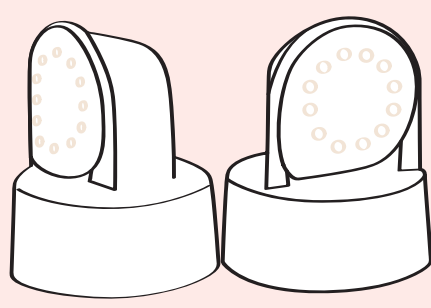

VALVE MEMBRANE

3+ Pumps per Day:
Replace every 2-4 wks.

 
1-2 Pumps per Day:
Replace every 2 mo.

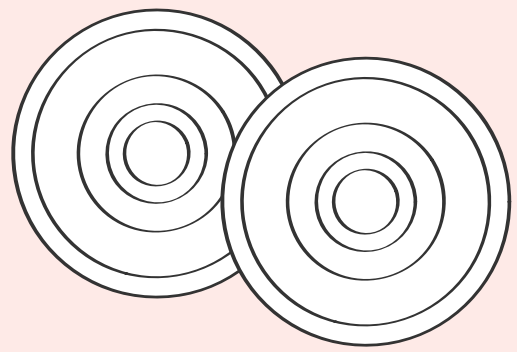

BACKFLOW PROTECTORS


3+ Pumps per Day:
Replace every 3 mo.

 1-2 Pumps per Day:
Replace every 6 mo.

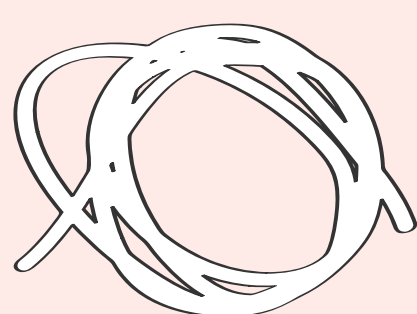

TUBING

 When it becomes damaged

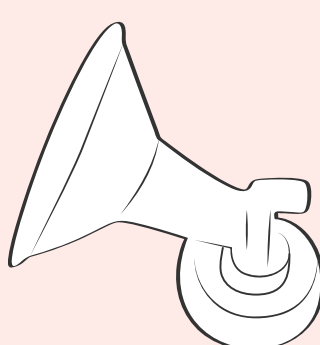

FLANGES

Replace every 6 months



MILK COLLECTION CONTAINER

Replace every 6 months

For more information about replacement parts, visit [Aeroflowbreastpumps.com](https://aeroflowbreastpumps.com) or refer to your breast pump's user manual.

DISCLAIMER: Most breast pump manufacturers have a limited warranty on the parts included with your pump and **many insurers will cover replacement equipment**. For pump safety and efficiency, it is recommended to replace these supplies at least every 90 days or as soon as you begin to notice discoloration, build up and/or lack of performance.

Breast Pump Terms

INDEPENDENT CYCLE/VACUUM

Feature that can customize suction strength and speed.

LETDOWN/MESSAGE MODE

Speed and suction setting with very fast light suction per minute to help stimulate your milk to start flowing.

EXPRESSION MODE

Speed and suction setting with slower, deeper suction to remove milk once it starts flowing.

RECHARGEABLE/WIRELESS

Power option for pumps that can be charged and don't require constant electricity.

BATTERY PACK

Power option for pumps that can use 6-8 batteries to operate instead of an AC adapter.

TUBELESS/WEARABLE

Type of pump that can be worn inside a bra for discreet pumping.